

# Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

## Model # 972236 · 2-Hose Acid Spray-All / Acid Airless Foamer

### REQUIREMENTS

#### Chemical Concentrate

#### Water

Temperature	up to 160°F
Pressure	35 to 125 PSI
Flow	1.3 GPM @ 40 PSI
Supply Line	1/2"

#### Hose

Foam	1/2" ID x 50'
Spray	1/2" ID x 50'

#### Nozzle

Foam	A-25A Airless Foam Wand
Spray	2550

### OPTIONS

#### Stainless Steel Hose Racks

Large Stainless Steel Hose Rack	# 224150
---------------------------------	----------

#### Stainless Steel Jug Racks

2 ½ Gal. (8 ½" x 10 ½")	# 224210
5 Gallon (12" x 12") Round/Square	# 224215

#### Drum & Tote Stick Lengths & Seal Materials

Drum Stick, 33" (Viton or EPDM)	# 491643 / 491643-E
Drum Stick, 48" (Viton or EPDM)	# 491648 / 491648-E
Drum Stick, 54" (Viton or EPDM)	# 491645 / 491645-E
Tote Stick, 33" (Viton or EPDM)	# 491653 / 491653-E
Tote Stick, 48" (Viton or EPDM)	# 491654 / 491654-E
Tote Stick, 54" (Viton or EPDM)	# 491656 / 491656-E



[www.laffertyequipment.com](http://www.laffertyequipment.com)

501-851-2820

**WARNING! READ ALL  
INSTRUCTIONS BEFORE  
USING EQUIPMENT!**



### OVERVIEW

The 2-Hose Acid Spray-All / Acid Airless Foamer is a dual-function spray and foam applicator for applying 2 different chemicals, such as those used to remove concrete and for aluminum brightening. This acid-resistant venturi injection system uses standard city water pressure (35 - 125 PSI) to draw and blend the chemical concentrates into the water stream. The foaming solution then flows through the foam hose to the "airless" foam wand which draws in atmospheric air to create and project wet, clinging foam on to any surface. The other solution is projected through a separate hose in a fan pattern spray.

**SAFETY & OPERATIONAL PRECAUTIONS**

- When connecting to a potable water supply follow all local codes for backflow prevention.
- **WARNING:** Severe damage to your facility, or contamination of your potable water supply, can occur without proper backflow prevention.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and safety goggles when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure.
- Never leave inlet ball valves on when unit is not in use.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without first consulting chemical manufacturer.

**TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)**

If you are connecting to a potable water supply follow all local codes for backflow prevention.

1. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
2. Connect hose(s) as shown in the diagram.
3. Flush any new plumbing of debris before connecting water.
4. Connect water supply. Install a water filter if water piping is older or has known contaminants.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. **DO NOT OVER-TIGHTEN.**
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

**TO OPERATE**

Always make sure the discharge is closed or pointed in a safe direction before turning inlet valve on. Discharge can be shut off at any time during operation but should not be left off for long periods of time with the inlet valve on.

**TO FOAM**

1. With foam wand in hand open the inlet ball valve.
2. Open the discharge ball valve to begin application.
3. Make final metering tip adjustments based on application results.
4. When foaming is completed, close the discharge ball valve then close the inlet ball valve.
5. Briefly re-open the discharge ball valve to relieve pressure in hose. Rinse the work surface before foam dries.

**TO SPRAY**

1. With spray wand in hand and the discharge ball valve closed open the inlet ball valve.
2. Open the discharge ball valve to begin application.
3. Make final metering tip adjustments based on application results.
4. When application is completed, close the discharge ball valve then close the inlet ball valve.
5. Briefly re-open the discharge ball valve to relieve pressure in hose. If applicable rinse the work surface before solution dries.

**METERING TIP SELECTION**

METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 40 PSI	
		FOAM	SPRAY
Brown	0.56	297:1	293:1
Clear	0.88	189:1	186:1
Bright Purple	1.38	121:1	119:1
White	2.15	77:1	76:1
Pink	2.93	57:1	56:1
Corn Yellow	3.84	43:1	43:1
Dark Green	4.88	34:1	34:1
Orange	5.77	29:1	28:1
Gray	6.01	28:1	27:1
Light Green	7.01	24:1	23:1
Med. Green	8.06	21:1	20:1
Clear Pink	9.43	18:1	17:1
Yellow Green	11.50	14:1	14:1
Burgundy	11.93	14:1	14:1
Pale Pink	13.87	12:1	12:1
Light Blue	15.14	11:1	11:1
Dark Purple	17.88	9:1	9:1
Navy Blue	25.36	7:1	6:1
Clear Aqua	28.60	6:1	6:1
Black	50.00	—	3:1
No Tip Ratio Up To:		4:1	2.5:1

The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.


**FORMULA**

**GPM × 128 ÷ Desired Dilution Ratio = oz/min**

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

**UNIT FLOW RATES**

PSI	GPM	
	FOAM	SPRAY
35	1.22	1.20
40	1.30	1.28
50	1.45	1.43
60	1.59	1.57
70	1.72	1.69
80	1.84	1.81
90	1.95	1.92
100	2.06	2.02
110	2.16	2.12
120	2.25	2.22
125	2.30	2.26

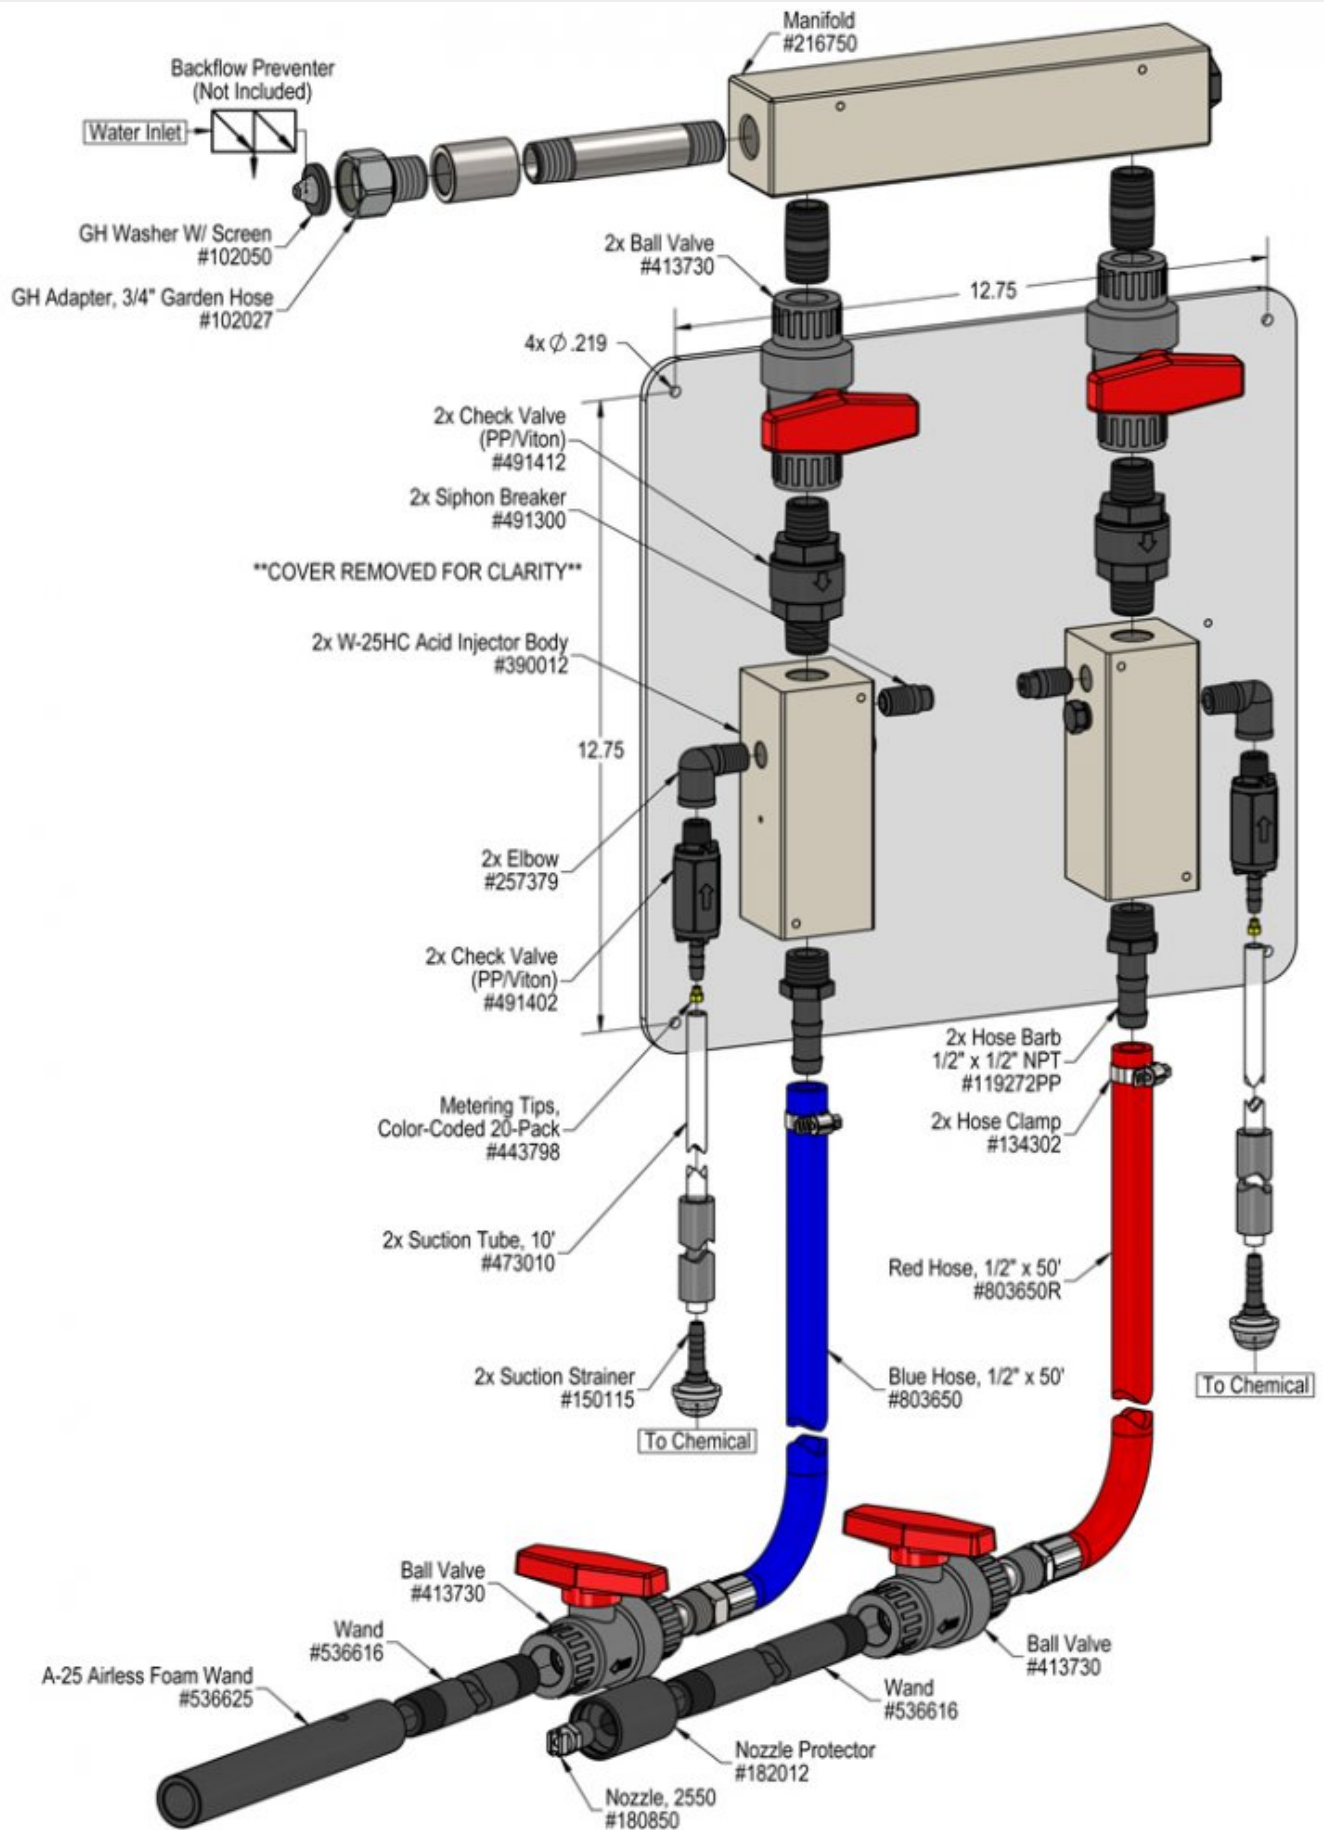

## Troubleshooting Guide

Problem	Possible Cause / Solution	
	Startup	Maintenance
A) Will not draw chemical	1, 5, 6, 7, 8, 10	11, 12, 13, 14, 15, 16, 17
B) Foam does not clean or foam properly	2, 4, 5, 7, 8, 9	10, 11, 12, 13, 14, 15, 16
C) Using too much chemical	3	
D) Water backing up into chemical container	10	

Possible Cause / Solution	
Startup	Maintenance
<ol style="list-style-type: none"> <li><b>1. Inlet ball valve not completely open</b> <ul style="list-style-type: none"> <li>◦ Completely open the inlet ball valve.</li> </ul> </li> <li><b>2. Not enough chemical - metering tip too small</b> <ul style="list-style-type: none"> <li>◦ Install larger metering tip.</li> </ul> </li> <li><b>3. No metering tip installed or metering tip too large</b> <ul style="list-style-type: none"> <li>◦ Install smaller metering tip.</li> </ul> </li> <li><b>4. Improper chemical</b> <ul style="list-style-type: none"> <li>◦ Ensure product is recommended for foaming and the application.</li> </ul> </li> <li><b>5. Chemical tube not immersed in chemical or chemical depleted</b> <ul style="list-style-type: none"> <li>◦ Immerse tube or replenish.</li> </ul> </li> <li><b>6. Discharge hose too long or wrong size or kinked</b> <ul style="list-style-type: none"> <li>◦ Straighten the hose or replace hose with correct size.</li> </ul> </li> <li><b>7. Discharge ball valve not completely open</b> <ul style="list-style-type: none"> <li>◦ Completely open the discharge ball valve.</li> </ul> </li> <li><b>8. Water pressure or water volume too low/inlet piping too small causing poor chemical pick up</b> <ul style="list-style-type: none"> <li>◦ Increase water pressure or water volume</li> </ul> </li> <li><b>9. Soil has hardened on surface; always rinse before chemical dries</b> <ul style="list-style-type: none"> <li>◦ Reapplication may be necessary.</li> </ul> </li> </ol>	<ol style="list-style-type: none"> <li><b>10. Chemical check valve stuck or failed</b> <ul style="list-style-type: none"> <li>◦ Clean or replace.</li> </ul> </li> <li><b>11. Chemical strainer or metering tip partially blocked</b> <ul style="list-style-type: none"> <li>◦ Clean or replace chemical strainer and/or metering tip.</li> </ul> </li> <li><b>12. Chemical tube stretched out or pin hole/cut in chemical tube</b> <ul style="list-style-type: none"> <li>◦ Cut off end of tube or replace tube.</li> </ul> </li> <li><b>13. Vacuum leak in chemical pick-up connections</b> <ul style="list-style-type: none"> <li>◦ Tighten the connection.</li> </ul> </li> <li><b>14. Water strainer clogged or missing/injector inlet orifice clogged</b> <ul style="list-style-type: none"> <li>◦ Clean or replace strainer; check/clean inlet orifice for obstructions. DO NOT DRILL OUT.</li> </ul> </li> <li><b>15. Hard water scale or chemical build-up may have formed in the injector body causing poor or no chemical pick-up</b> <ul style="list-style-type: none"> <li>◦ Follow Preventive Maintenance instructions below, using hot water and/or de-scaling acid. When there is no draw at all, carefully remove fittings and soak entire injector body in de-scaling acid.</li> </ul> </li> <li><b>16. Foam wand clogged or scaled up / wrong nozzle</b> <ul style="list-style-type: none"> <li>◦ Hard water scale or chemical build-up may have formed, soak entire foam wand in de-scaling acid / see requirements.</li> </ul> </li> <li><b>17. More than one chemical ball valve open or no chemical valve open</b> <ul style="list-style-type: none"> <li>◦ 2 &amp; 3 Way models only</li> </ul> </li> </ol>

**PREVENTIVE MAINTENANCE:** When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

