## Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

## Model # 915855SS · Portable 1035 SS Sanitize / Rinse / LCSS Foam Hose Drop Station

#### REQUIREMENTS

#### **Chemical Concentrate**

Water	
Temperature	up to 180°F
Pressure	35 to 125 PSI
Flow	9.4 GPM @ 40 PSI
Supply Line	3/4"
Compressed Air	up to 3 CFM
Hose	
Sanitize	3/4" ID x 40'
Rinse	3/4" ID x 40'
Foam	3/4" ID x 40'
Nozzle	
Sanitize	50250
Rinse	4 Hole Rinse Nozzle
Foam	50250
OPTIONS	

#### **OPTIONS**

5 Gallon Pail	
Pail, 5 Gallon Round W/ Suction Stem	# 709105
Separate Hose For Incompatible Chemicals	
Red Hose Kit, 3/4" x 40'	# 807740RQD

Square Jug Rack Conversion Specify Round or Square Jug Racks at time of order

Alternate Check Valves - EPDM Standard		
Check Valve, Chemical, PP/Viton, 1/4"	# 491315	
Check Valve, Air, SS/Viton, 1/4"	# 491306	





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

### **OVERVIEW**

The Portable 1035 SS Sanitize/Rinse/LCSS Foam Hose Drop Station is a combination applicator for applying one chemical as foam, another as a high-volume, sanitizing spray and for rinsing. Featuring an all stainless steel cart assembly, this stainless steel venturi injection system uses standard city water pressure (35 - 125 PSI) to draw and blend chemical concentrates into the water streams to create accurately diluted solutions using precision metering tips to control chemical usage. Rich, clinging foam is created by injecting compressed air into the foaming solution to greatly increase volume and coverage ability. The foaming solution is then projected through the discharge hose and fan nozzle at distances up to 12 feet. The sanitizer solution is projected as a "flooding" spray for fast complete coverage. Rinse at full pressure using the and unique, powerful 4-hole nozzle.

#### 915855SS • Portable 1035 SS Sanitize / Rinse / LCSS Foam Hose Drop Station

## **SAFETY & OPERATIONAL PRECAUTIONS**

- When connecting to a potable water supply follow all local codes for backflow prevention.
- WARNING: Severe damage to your facility, or contamination of your potable water supply, can occur without proper backflow prevention.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- · Wear protective clothing, gloves and safety goggles when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure.
- Never leave inlet ball valves on when unit is not in use.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without first consulting chemical manufacturer.

#### TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

- 1. Place a 5 gallon container of chemical concentrate in the jug rack(s).
- Quick connect the discharge hose to the foamer and close the ball valves. The hose is used for both foam and a compatible sanitizer. <u>If not compatible, order a second hose assembly. See options.</u>
- 3. Quick connect the black wand to the discharge ball valve. This wand/nozzle is used for foaming and sanitizing.
- 4. Connect water supply. Flush any new plumbing of debris before connecting.
- 5. Connect compressed air. If piping is older and has known contaminants, install a filter.

# Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- · Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER-TIGHTEN.
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

#### TO OPERATE

<u>Always</u> make sure the discharge is closed or pointed in a safe direction before turning water on. Discharge can be shut off at any time during operation but <u>should not be left unattended for long periods of time. Expect a</u> strong blast when re-opening the discharge ball valve or trigger gun.

- TO FOAM
  - 1. Securely quick connect the hose to the foam discharge.
  - Quick connect the foam/sanitize wand to the discharge ball valve. Hold the wand firmly and direct the discharge in a safe direction when opening.
  - 3. Open the discharge ball valve, the foam ball valve and the air ball valve.
  - 4. Make final metering tip adjustments based on application results.
    - Wait a few seconds and observe foam consistency.
    - Use the least amount of air needed to achieve good foam quality to prevent water pressure fluctuations from affecting performance. Air pressure must be kept lower than water pressure.
    - To adjust foam consistency pull out on the air regulator knob, turn slightly clockwise for dryer foam and counterclockwise for wetter foam. Wait a few seconds to see each adjustment.
    - Medium wet foam will give the best cleaning results! Dry foam will NOT clean as well!
    - You may also have to try different sized metering tips and air settings until foam consistency and cleaning results are acceptable. Once this is set and desired foam consistency is achieved, push lock the knob. You are ready to start application.
  - 5. When foaming is completed, close the discharge ball valve, return to the unit and close the water and air ball valves. Briefly re-open the discharge ball valve to relieve pressure in the hose.
  - 6. Rinse before the foam dries.

#### TO RINSE

- 1. Relieve pressure in the hose, quick connect the hose to the rinse discharge.
- 2. Replace the foam wand with the 4-Hole rinse nozzle. Close the ball valve.
- 3. Open the inlet ball valve then the discharge ball valve to begin application.
- 4. When rinsing is completed, close the discharge ball valve then close the inlet ball valve.
- 5. Briefly re-open the discharge ball valve to relieve pressure in hose.

#### TO SANITIZE

- 1. Make sure to relieve pressure in the hose, securely quick connect it to the sanitizer.
- 2. Quick connect the sanitize wand to the ball valve.
- 3. Open the inlet and discharge ball valves to begin sanitizing.
- 4. Make final metering tip adjustments based on application results.
- 5. When sanitizing is completed, close the discharge then inlet ball valves.
- 6. Relieve pressure in the hose. Rinse if applicable.

METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 40 PSI		
		SANITIZE	RINSE	FOAM
Brown	0.56	2149:1	—	306:1
Clear	0.88	1367:1	—	195:1
Bright Purple	1.38	872:1	—	124:1
White	2.15	560:1	—	80:1
Pink	2.93	411:1	—	59:1
Corn Yellow	3.84	313:1	—	45:1
Dark Green	4.88	247:1	—	35:1
Orange	5.77	209:1	—	30:1
Gray	6.01	200:1	—	29:1
Light Green	7.01	172:1	—	24:1
Med. Green	8.06	149:1	—	21:1
Clear Pink	9.43	128:1	—	18:1
Yellow Green	11.50	105:1	—	15:1
Burgundy	11.93	101:1	—	14:1
Pale Pink	13.87	87:1	—	12:1
Light Blue	15.14	79:1	—	11:1
Dark Purple	17.88	67:1	—	10:1
Navy Blue	25.36	47:1	-	7:1
Clear Aqua	28.60	42:1	—	—
Black	50.00	24:1	—	—
No Tip Ratio Up To:		15:1	—	6:1

**METERING TIP SELECTION** 


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

#### FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM
  Use 20 for 20:1 dilution ratio. 30 for 30:1. etc.
- Ose 2010/20.1 ullulor ratio, 3010/30.1, etc.
  Match calculated ounces per minute (oz/min) to
- nearest oz/min in Metering Tip Selection chart.

UNIT FLOW RATES			
PSI	GPM		
P51	SANITIZE	RINSE	FOAM
35	8.79	6.73	1.25
40	9.40	7.20	1.34
50	10.51	8.05	1.50
60	11.51	8.82	1.64
70	12.44	9.52	1.77
80	13.29	10.18	1.90
90	14.10	10.80	2.01
100	14.86	11.38	2.12
110	15.59	11.94	2.22
120	16.28	12.47	2.32
125	16.62	12.73	2.37

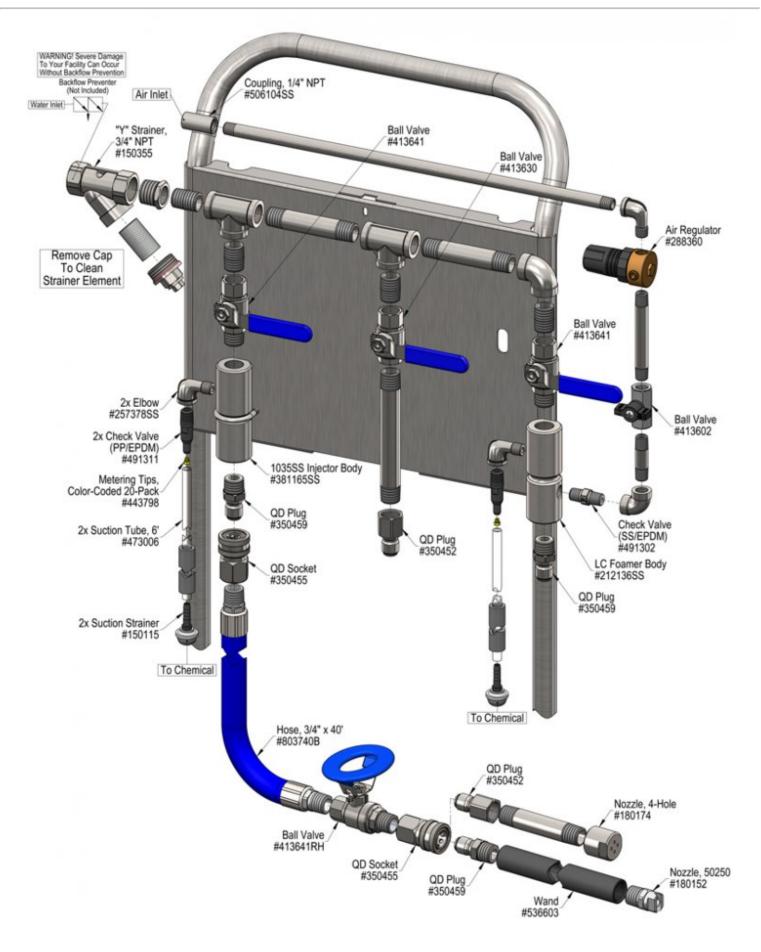

# **Troubleshooting Guide**

Problem	Possible Cause / Solution		
	Startup	Maintenance	
A) Foam surges and/or hose "bucks".	1, 2, 3, 4, 6, 7, 8, 9, 10	12, 13, 14, 15, 16, 18, 19	
B) Foamer will not draw chemical.	1, 3, 4, 7, 8, 9, 10	12, 13, 14, 15, 16, 18, 19	
C) Foam too wet.	2, 3, 4, 6, 7, 8, 9, 10	13, 14, 15, 16, 18, 19	
D) Foam does not clean properly.	1, 4, 6, 11		
E) Using too much chemical.	5		
F) Water / Chemical backing up into air line.		17	
G) Water backing up into chemical container.		12	
H) Air or chemical solution backing up into water line.		20	

Problem	Pos	Possible Cause / Solution		
	Startup	Maintenance		
A) Sanitizer will not draw chemical.	3, 7, 8, 9, 10	12, 13, 14, 15, 18, 19		
B) Dilution is too strong.	5			
C) Dilution is too weak.	4			
D) Water backing up into chemical container.		18		

Possible Cause / Solution		
St	artup	Maintenance
<ol> <li>Air pressure too high         <ul> <li>Adjust the air regulation output stabilizes.</li> </ul> </li> </ol>	ator slowly counterclockwise until	<ul> <li>12. Water strainer element clogged or inlet orifice clogged</li> <li>• Clean or replace strainer element; check/clean inlet orifice for obstructions. DO NOT DRILL OUT.</li> </ul>
2. Use of an oiler in the airli ∘ Use only clean, dry	ne will cause poor foam quality air.	<ul> <li>13. Chemical strainer or metering tip partially blocked</li> <li>• Clean or replace chemical strainer and/or metering tip.</li> </ul>
<ul> <li>Completely open the</li> </ul>	II valves not completely open e inlet and (if applicable) discharge	<ul><li>14. Chemical tube stretched out or pin hole/cut in tube</li><li>• Cut off end of tube or replace tube.</li></ul>
ball valves.	- 4	15. Vacuum leak in chemical pick-up connections
<ul> <li>4. Not enough chemical - m</li> <li>○ Install larger meterion</li> </ul>		<ul> <li>Tighten the connection.</li> <li>16. Air regulator failed</li> </ul>
5. No metering tip installed • Install smaller meter	• • •	<ul> <li>Clean or replace.</li> <li>17. Air check valve failed</li> </ul>
6. Improper chemical ∘ Ensure product is r	ecommended for foaming and the	<ul> <li>Clean or replace.</li> </ul>
application.	-	<b>18. Chemical check valve stuck or failed</b> • Clean or replace.
<ul> <li>Chemical tube not immen</li> <li>Immerse tube or re</li> </ul>	-	19. Hard water scale or chemical build-up may have formed in the body causing poor or no chemical pick-up
<ul> <li>8. Discharge hose too long         <ul> <li>Straighten the hose                 and length.</li> </ul> </li> </ul>	or wrong size or kinked or replace hose with correct size	<ul> <li>Follow Preventive Maintenance instructions below, using hot water or descaling acid. When there is no draw at all, carefully remove fittings and soak entire</li> </ul>
9. Nozzle size too small	_	body in descaling acid.
small causing poor chem	volume too low/inlet piping too	<ul> <li>20. No backflow preventer installed and/or inlet ball valve left on when not in use         <ul> <li>Install appropriate backflow preventer into water line.</li> </ul> </li> </ul>
11. Soil has hardened on sur • Reapplication may	<b>face, rinse foam before it dries</b> be necessary.	

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

