Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 972225 · Drum Bung Mount Acid Airless Foamer

REQUIREMENTS

Chemical Concentrate

Water	
Temperature	up to 160°F
Pressure	35 to 125 PSI
Flow	1.30 GPM @ 40 PSI
Supply Line	1/2"
Hose	1/2" ID x 50'
Nozzle	A-25A Airless Foam Wand
OPTIONS	

Stainless Steel Hose Racks	
Large Stainless Steel Hose Rack	# 224150





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The Drum Bung Mount Acid Airless Foamer is a drum-mounted foam applicator for applying highly corrosive chemicals, such as those used to remove concrete and for aluminum brightening, without compressed air. This compact acid-resistant venturi injection system uses standard city water pressure (35 - 125 PSI) to draw and blend a high concentration of acid directly from the drum into the water stream to create a strong solution. The solution then flows through the discharge hose to the "airless" foam wand which draws in atmospheric air to create and project wet, clinging foam.

SAFETY & OPERATIONAL PRECAUTIONS

- When connecting to a potable water supply follow all local codes for backflow prevention.
- WARNING: Severe damage to your facility, or contamination of your potable water supply, can occur without proper backflow prevention.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- · Wear protective clothing, gloves and safety goggles when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure.
- Never leave inlet ball valves on when unit is not in use.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without <u>first</u> consulting chemical manufacturer.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

If you are connecting to a potable water supply follow all local codes for backflow prevention.

- 1. Choose and install the chemical pick up configuration you want to use.
- 2. Screw the unit to drum or tote bung.
- 3. Connect the discharge hose as shown in the diagram and close the ball valve.
- 4. To prevent blocking the small water jets in the injector flush any new plumbing of debris before connecting. If
- water piping is older and has known contaminants install a water filter.
- 5. Connect water supply.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER-TIGHTEN.
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

TO OPERATE

- 1. With foam wand in hand open the inlet ball valve.
- 2. Open the discharge ball valve to begin application.
- 3. Make final metering tip adjustments based on application results.
- 4. When foaming is completed, close the discharge ball valve then close the inlet ball valve.
- 5. Briefly re-open the discharge ball valve to relieve pressure in hose. Rinse the work surface before foam dries.

METERING TIP SELECTION DILUTION METERING TIP OZ/MIN RATIO COLOR @ 40 PSI 297:1 0.56 Brown 0.88 189:1 Clear 1.38 121:1 Bright Purple 2.15 77:1 White 57.1 Pink 2.93 Corn Yellow 3 84 43.1 4.88 34:1 Dark Green 5.77 Orange 29:1 Gray 6.01 28:1 Light Green 7.01 24.1 Med. Green 8.06 21:1 Clear Pink 9.43 18:1 Yellow Green 11.50 14:1 11.93 14:1 Burgundy Pale Pink 13.87 12:1 Light Blue 15.14 11:1 Dark Purple 17.88 9:1 Navy Blue 25.36 7:1 Clear Aqua 28.60 6:1 Black 50.00 No Tip Ratio Up To: 4:1


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM Use 20 for 20:1 dilution ratio. 30 for 30:1. etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

UNIT FLOW RATES		
PSI	GPM	
35	1.22	
40	1.30	
50	1.45	
60	1.59	
70	1.72	
80	1.84	
90	1.95	
100	2.06	
110	2.16	
120	2.25	
125	2.30	

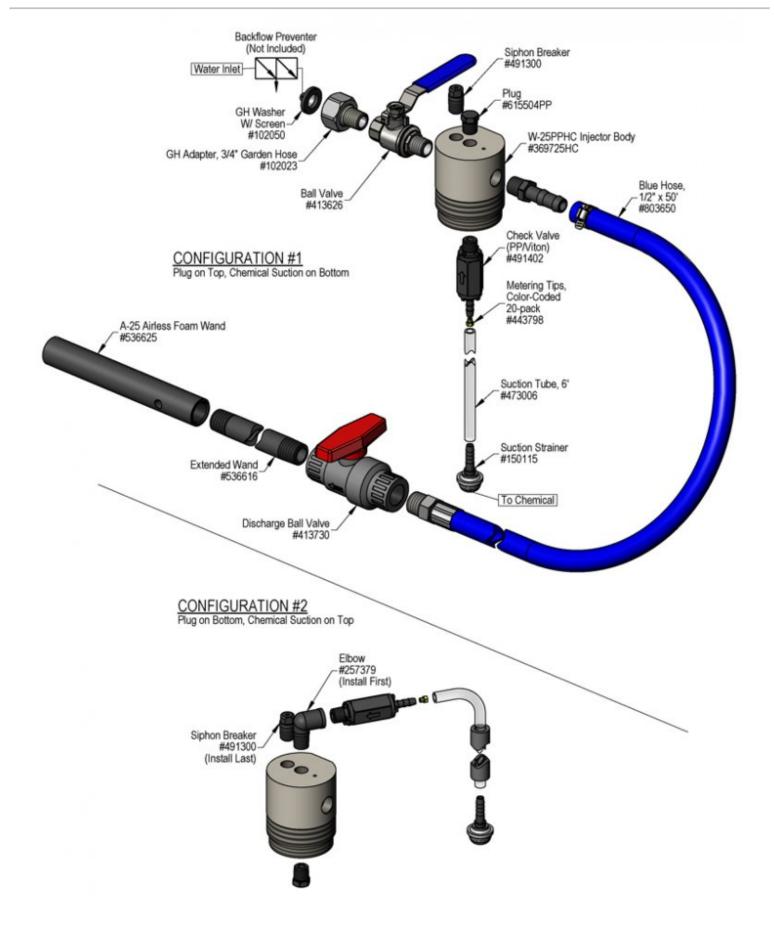

Troubleshooting Guide			
	Possible Cause / Solution		
Problem	Startup Maintenance		
) Will not draw chemical) Foam does not clean or foam properly) Using too much chemical) Water backing up into chemical container	1, 5, 6, 7, 8, 10 2, 4, 5, 7, 8, 9 10 11, 12, 13, 14, 15, 16, 17 10, 11, 12, 13, 14, 15, 16 10, 11, 12, 13, 14, 15, 16 10		
Possible Ca	use / Solution		
Startup	Maintenance		
 Inlet ball valve not completely open Completely open the inlet ball valve. 	10. Chemical check valve stuck or failed • Clean or replace.		
 2. Not enough chemical - metering tip too small Install larger metering tip. 	11. Chemical strainer or metering tip partially blocked • Clean or replace chemical strainer and/or metering tip.		
 3. No metering tip installed or metering tip too large Install smaller metering tip. 4. Improper chemical Ensure product is recommended for foaming and the application. 	 12. Chemical tube stretched out or pin hole/cut in chemical tube Cut off end of tube or replace tube. 13. Vacuum leak in chemical pick-up connections Tighten the connection. 		
 5. Chemical tube not immersed in chemical or chemical depleted Immerse tube or replenish. 6. Discharge hose too long or wrong size or kinked 	 14. Water strainer clogged or missing/injector inlet orifice clogged • Clean or replace strainer; check/clean inlet orifice for obstructions. DO NOT DRILL OUT. 		
 Straighten the hose or replace hose with correct size. Discharge ball valve not completely open Completely open the discharge ball valve. Water pressure or water volume too low/inlet piping too small causing poor chemical pick up 	 15. Hard water scale or chemical build-up may have formed the injector body causing poor or no chemical pick-up Follow Preventive Maintenance instructions below, using hot water and/or de-scaling acid. When there is draw at all, carefully remove fittings and soak entire injector body in de-scaling acid. 		
 Increase water pressure or water volume Soil has hardened on surface; always rinse before chemical dries Reapplication may be necessary. 	 16. Foam wand clogged or scaled up / wrong nozzle Hard water scale or chemical build-up may have formed soak entire foam wand in de-scaling acid / see requirements. 17. More than one chemical ball valve open or no chemical 		
	• 2 & 3 Way models only		

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

