Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 975520 · Uni-Body Stiff Brush Airless Foamer

REQUIREMENTS

Chemical Concentrate

Water	
Temperature	up to 160°F
Pressure	50 to 125 PSI
Flow	0.45 GPM @ 50 PSI
Supply Line	1/2"
Hose	3/8" ID x 50'
Nozzle	Foam Brush Head, Stiff Bristle

OPTIONS

Stainless Steel Hose Racks	
Large Stainless Steel Hose Rack	# 224150
Stainless Steel Jug Racks	
Jug Rack, SS, 1 Gallon, Round/Square	# 224200
Jug Rack, SS, 2 1/2 Gallon	# 224210
Jug Rack, SS, 5 Gallon, Round/Square	# 224215
For Painted/Finished Surfaces	
Foam Brush Head, Soft Bristle	# 535100
Safe Flow Lid™ for 1 Gallon Jugs	
Lid, Suction Tube, and Strainer	# 709101
Alternate Check Valve - EPDM Standard	
Check Valve, Chemical, PP/Viton, 1/4"	# 491315





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The Stiff Brush Airless Foamer is a foam cleaning system that continually creates foam through the stiff bristle brush, without the need for compressed air. This venturi injection system uses city water pressure (40 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution using precision metering tips. The solution then flows through the discharge hose and handle to the "airless" foamer which draws in atmospheric air to create an optimal volume of wet, clinging foam in the brush. Design for use on non painted surfaces the foam continually flushes debris from the bristles.

SAFETY & OPERATIONAL PRECAUTIONS

- When connecting to a potable water supply follow all local codes for backflow prevention.
- WARNING: Severe damage to your facility, or contamination of your potable water supply, can occur without proper backflow prevention.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and safety goggles when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure.
- Never leave inlet ball valves on when unit is not in use.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without <u>first</u> consulting chemical manufacturer.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

If you are connecting to a potable water supply follow all local codes for backflow prevention.

- 1. Mount the unit to a suitable surface <u>above</u> the chemical supply to prevent siphoning.
- 2. Connect hose(s) as shown in the diagram.
- 3. Flush any new plumbing of debris before connecting water.
- 4. Connect water supply. Install a water filter if water piping is older or has known contaminants.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on <u>water thin</u> chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER-TIGHTEN.
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

TO OPERATE

- 1. With the brush foamer handle in hand open the inlet ball valve.
- 2. Open the discharge ball valve to begin application.
- 3. Make final metering tip adjustments based on foaming and cleaning results.
- 4. If more than enough foam is present close the discharge ball valve until more is needed.
- 5. When application is completed, close the discharge ball valve, return to the unit and close the inlet ball valve. Reopen the discharge ball valve to relieve pressure in hose then close the discharge ball valve.
- 6. Rinse before the foam dries.

METERING TIP SELECTION

METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 50 PSI
Brown	0.56	103:1
Clear	0.88	65:1
Bright Purple	1.38	42:1
White	2.15	27:1
Pink	2.93	20:1
Corn Yellow	3.84	15:1
Dark Green	4.88	12:1
Orange	5.77	10:1
Gray	6.01	10:1
Light Green	7.01	8:1
No Tip Ratio Up To:		4:1


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

UNIT FLOW RATES		
PSI	GPM	
50	0.45	
60	0.49	
70	0.53	
80	0.57	
90	0.60	
100	0.64	
110	0.67	
120	0.70	
125	0.71	

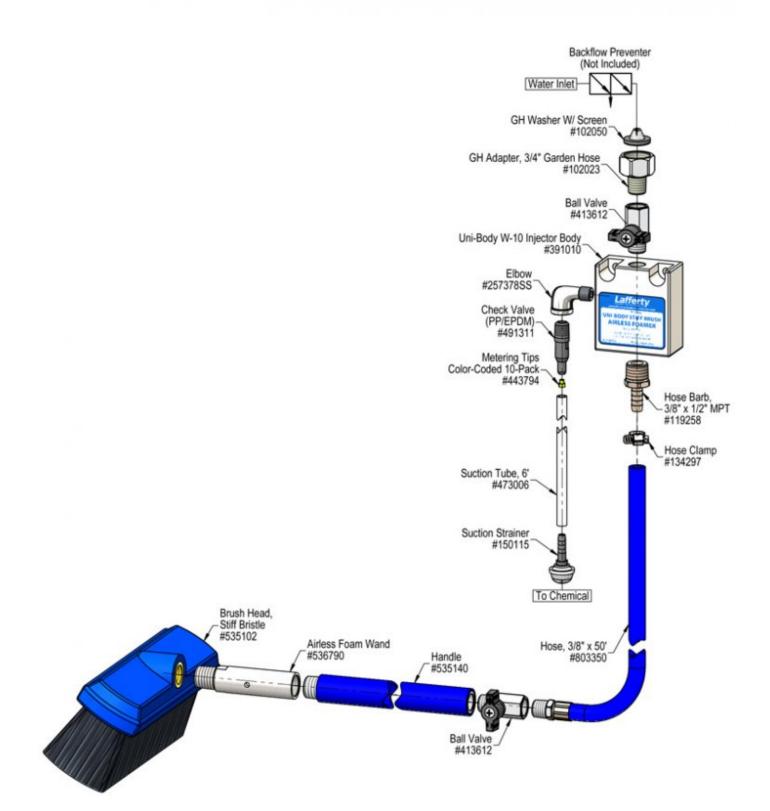

Troubleshooting Guide		
Problem	Possible Cause / Solution	
A) Will not draw chemical B) Foam does not clean or foam properly C) Using too much chemical D) Water backing up into chemical container	Startup Maintenance 1, 5, 6, 7, 8, 10 11, 12, 13, 14, 15, 16, 17 2, 4, 5, 7, 8, 9 10, 11, 12, 13, 14, 15, 16	
	use / Solution	
Startup	Maintenance	
 1. Inlet ball valve not completely open Completely open the inlet ball valve. 	10. Chemical check valve stuck or failed • Clean or replace.	
 2. Not enough chemical - metering tip too small o Install larger metering tip. 	11. Chemical strainer or metering tip partially blocked • Clean or replace chemical strainer and/or metering tip.	
 3. No metering tip installed or metering tip too large Install smaller metering tip. 	12. Chemical tube stretched out or pin hole/cut in chemical tube	
 4. Improper chemical Ensure product is recommended for foaming and the application. 	 Cut off end of tube or replace tube. 13. Vacuum leak in chemical pick-up connections Tighten the connection. 	
 5. Chemical tube not immersed in chemical or chemical depleted Immerse tube or replenish. 	 14. Water strainer clogged or missing/injector inlet orifice clogged Clean or replace strainer; check/clean inlet orifice for obstructions. DO NOT DRILL OUT. 	
 6. Discharge hose too long or wrong size or kinked • Straighten the hose or replace hose with correct size. 	15. Hard water scale or chemical build-up may have formed in	
 7. Discharge ball valve not completely open • Completely open the discharge ball valve. 	 the injector body causing poor or no chemical pick-up Follow Preventive Maintenance instructions below, using hot water and/or de-scaling acid. When there is no 	
8. Water pressure or water volume too low/inlet piping too small causing poor chemical pick up	draw at all, carefully remove fittings and soak entire injector body in de-scaling acid. 16. Foam wand clogged or scaled up / wrong nozzle • Hard water scale or chemical build-up may have formed soak entire foam wand in de-scaling acid / see requirements.	
 Increase water pressure or water volume 9. Soil has hardened on surface; always rinse before chemical dries Reapplication may be necessary. 		
	 17. More than one chemical ball valve open or no chemical valve open ○ 2 & 3 Way models only 	

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

