

Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 975217 • WR-2 Micro Flow Foam / Rinse / Sanitize

REQUIREMENTS

Chemical Concentrate

Water

Temperature	up to 160°F
Pressure	35 to 125 PSI
Flow	1.0 GPM @ 40 PSI
Supply Line	1/2"

Hose

Foam	3/8" ID x 50'
Rinse	3/8" ID x 50'
Sanitize	3/8" ID x 50'

Nozzle

Foam	#10 Bullet Airless Foamer
Rinse	2510
Sanitize	2510

OPTIONS

Stainless Steel Hose Racks

Large Stainless Steel Hose Rack	# 224150
---------------------------------	----------

Stainless Steel Jug Racks

Jug Rack, SS, 1 Gallon, Round/Square	# 224200
Jug Rack, SS, 2 1/2 Gallon	# 224210
Jug Rack, SS, 5 Gallon, Round/Square	# 224215

Safe Flow Lid™ for 1 Gallon Jugs

Lid, Suction Tube, and Strainer	# 709101
---------------------------------	----------

Alternate Check Valve - EPDM Standard

Check Valve, Chemical, PP/Viton, 1/4"	# 491315
---------------------------------------	----------



Lafferty
EQUIPMENT MANUFACTURING LLC
CFS TECHNOLOGIES

www.laffertyequipment.com

501-851-2820

**WARNING! READ ALL
INSTRUCTIONS BEFORE
USING EQUIPMENT!**

OVERVIEW

The WR-2 Micro-Flow Foam/Rinse/Sanitize System is a combination low volume airless foam/sanitizer applicator with a rinse mode. This venturi injection system uses standard city water pressure (35 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. The foaming solution then flows through the discharge hose to the adjustable fan pattern airless foam wand which draws in atmospheric air to create and project wet, clinging foam on to any surface. Alternate the unit and combo gun ball valves to apply sanitizer or to rinse through the fan pattern spray nozzle. The low flow rate makes this unit ideal for use in restaurants or other areas where minimal over-spray and runoff are essential.

SAFETY & OPERATIONAL PRECAUTIONS

- When connecting to a potable water supply follow all local codes for backflow prevention.
- **WARNING:** Severe damage to your facility, or contamination of your potable water supply, can occur without proper backflow prevention.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and safety goggles when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure.
- Never leave inlet ball valves on when unit is not in use.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without first consulting chemical manufacturer.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

If you are connecting to a potable water supply follow all local codes for backflow prevention.

1. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
2. Connect hose(s) as shown in the diagram.
3. Flush any new plumbing of debris before connecting water.
4. Connect water supply. Install a water filter if water piping is older or has known contaminants.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. **DO NOT OVER-TIGHTEN.**
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

TO OPERATE

OPEN ONLY ONE INLET WATER BALL VALVE AT A TIME

TO FOAM

1. With the combo gun in hand, open the wash (foam) ball valve on the unit.
2. Open the wash (foam) ball valve on the combo gun to begin foam application. Allow several seconds for the chemical to be drawn and reach the foam nozzle.
3. Make final metering tip adjustments based on cleaning and foaming results.
4. When finished, close the wash ball valve on the combo gun, then on the unit.

TO RINSE

1. With the combo gun in hand, open the rinse ball valve on the unit.
2. Open the rinse/sanitize ball valve on the combo gun. Allow several seconds for the chemical to be purged from the hose.
3. When finished, close the rinse/sanitize ball valve on the combo gun, then on the unit.

TO SANITIZE

1. With the combo gun in hand, open the sanitize ball valve on the unit
2. Open the rinse/sanitize ball valve on the combo gun to begin sanitizer application. Allow several seconds for the chemical to be drawn and reach the spray nozzle.
3. Make final metering tip adjustments based on sanitizing performance.
4. When finished, close the rinse/sanitize ball valve on the combo gun, then on the unit.


WHEN FINISHED -- Open and close one of the ball valves on the combo gun to release pressure in hose.

METERING TIP SELECTION

METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 40 PSI		
		FOAM	RINSE	SANITIZE
Brown	0.56	94:1	—	94:1
Clear	0.88	60:1	—	60:1
Bright Purple	1.38	38:1	—	38:1
White	2.15	24:1	—	24:1
Pink	2.93	18:1	—	18:1
Corn Yellow	3.84	14:1	—	14:1
Dark Green	4.88	11:1	—	11:1
Orange	5.77	9:1	—	9:1
Gray	6.01	9:1	—	9:1
Light Green	7.01	—	—	—
Med. Green	8.06	—	—	—
Clear Pink	9.43	—	—	—
Yellow Green	11.50	—	—	—
Burgundy	11.93	—	—	—
Pale Pink	13.87	—	—	—
Light Blue	15.14	—	—	—
Dark Purple	17.88	—	—	—
Navy Blue	25.36	—	—	—
Clear Aqua	28.60	—	—	—
Black	50.00	—	—	—
No Tip Ratio Up To:		8:1	—	8:1
The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.				
FORMULA				
$GPM \times 128 \div \text{Desired Dilution Ratio} = \text{oz/min}$ <ul style="list-style-type: none"> • See Unit Flow Rates chart for GPM • Use 20 for 20:1 dilution ratio, 30 for 30:1, etc. • Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart. 				

UNIT FLOW RATES

PSI	GPM		
	FOAM	RINSE	SANITIZE
35	0.38	0.94	0.38
40	0.41	1.00	0.41
50	0.46	1.12	0.46
60	0.50	1.22	0.50
70	0.54	1.32	0.54
80	0.58	1.41	0.58
90	0.62	1.50	0.62
100	0.65	1.58	0.65
110	0.68	1.66	0.68
120	0.71	1.73	0.71
125	0.72	1.77	0.72

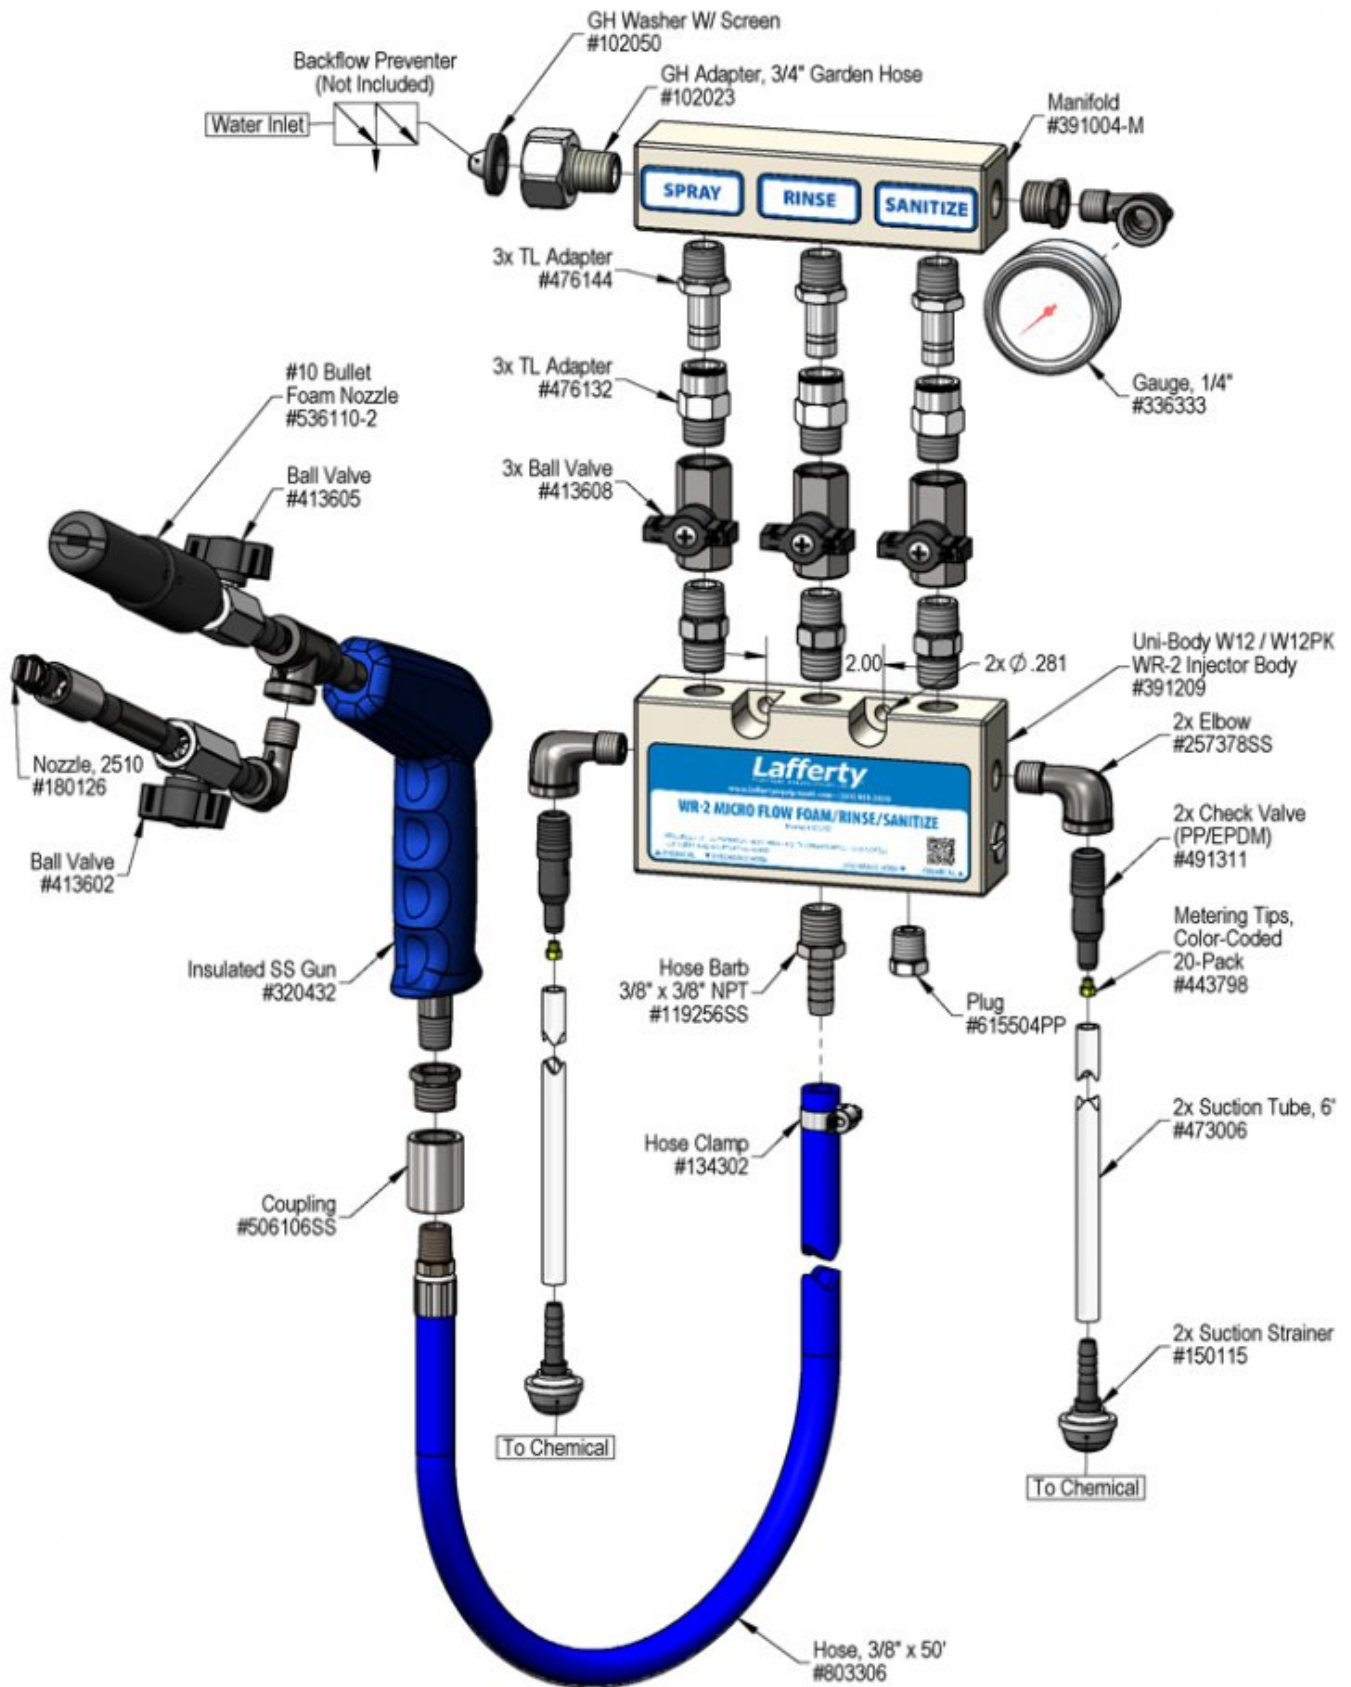

Troubleshooting Guide

Problem	Possible Cause / Solution	
	Startup	Maintenance
A) Unit will not draw chemical.	1, 2, 3, 4, 5	9, 11, 12, 13, 14, 15, 16
B) Using too much chemical.	7	
C) Foam/spray does not clean/perform.	6, 8	12, 13, 14, 16
D) Water back flowing into chemical		9
E) Solution backing up into water line.		10

Possible Cause / Solution	
Startup	Maintenance
1. Water pressure too low <ul style="list-style-type: none"> ◦ Increase water pressure (see requirements). 	9. Chemical check valve stuck or clogged <ul style="list-style-type: none"> ◦ Clean or replace.
2. Inlet ball valve or discharge ball valve not completely open <ul style="list-style-type: none"> ◦ Completely open one inlet and the discharge ball valves. ◦ (2-Way Units make sure one chemical ball valve is open) 	10. No backflow preventer installed <ul style="list-style-type: none"> ◦ Install appropriate backflow preventer onto water line.
3. More than one unit ball valve is open <ul style="list-style-type: none"> ◦ Open only one unit ball valve at a time. 	11. Airless Foam Wand screen blocked <ul style="list-style-type: none"> ◦ Dried chemical build-up may be obstructing flow through the screen. Remove fittings and soak the entire wand in de-scaling acid.
4. Discharge hose too long or kinked <ul style="list-style-type: none"> ◦ Straighten or shorten the hose. 	12. Metering tip blocked <ul style="list-style-type: none"> ◦ Clean or replace metering tip.
5. Chemical tube not immersed in chemical or chemical depleted <ul style="list-style-type: none"> ◦ Immerse or replenish chemical 	13. Chemical tube stretched out where tube slides over check valve or pin hole/cut in chemical tube <ul style="list-style-type: none"> ◦ Cut off end of tube or replace tube.
6. Improper chemical <ul style="list-style-type: none"> ◦ Ensure product is recommended for foaming and/or the application. 	14. Vacuum leak in chemical pick-up connection <ul style="list-style-type: none"> ◦ Tighten the connection.
7. Dilution too strong even with smallest metering tip <ul style="list-style-type: none"> ◦ Some weak dilutions at lower water pressures are impossible to achieve with a metering tip. Pre-dilute your chemical until desired dilution ratio is achieved. 	15. Water inlet strainer screen clogged <ul style="list-style-type: none"> ◦ Clean screen or replace.
8. Dilution too weak <ul style="list-style-type: none"> ◦ Install larger metering tip. 	16. Chemical build-up or scale may have formed in the body causing poor or no chemical pick-up <ul style="list-style-type: none"> ◦ Remove fittings and soak entire body in de-scaling acid. Replace fittings being careful not to cross thread or over tighten.

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

