Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # VC-1060 · 1-Way Ball Valve Mixing Station (High Flow)

REQUIREMENTS

Chemical Concentrate

Water		
Temperature	up to 160°F	
Pressure	25-125 PSI	
Supply Line	1/2" Minimum	
Flow		
High Flow (Black Injector)	4.0 - 7.3 GPM	
Low Flow (White Injector)	1.9 - 3.4 GPM	
Bottle Fill (Blue Injector)	0.6 - 1.0 GPM	

OPTIONS

Stainless Steel Jug Racks	
1 Gallon Round/Square	# 224200
1 Gallon Round/Square Locking	# 224200-L
2 ½ Gallon (8 ½" x 10 ½")	# 224210
5 Gallon Round/Square Locking (12" x 12")	# 224214
5 Gallon Round/Square (12" x 12")	# 224215
Safe Flow Lid™ for 1 Gallon Jugs	
Lid, Suction Tube, and Strainer	# 709101
Alternate Chemical Check Valve - EPDM Standard	
Check Valve, Chemical, PP, 1/4" (Viton)	# 491402





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The 1-Way Ball Valve Mixing Station is a chemical proportioner for accurately diluting a chemical concentrate to the required ratio and for filling any size container with diluted, ready-to-use chemical solution. This venturi injection system uses city water pressure (25 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. Ball valve activation allows for hands-free dispensing. Available with several flow rates to dispense into any sized container or equipment.

SAFETY & OPERATIONAL PRECAUTIONS

- For proper performance do NOT modify hose diameter or length.
- Do NOT attempt to install a discharge ball valve.
- Manufacturer assumes no liability for the use or misuse of this unit.
- When connecting to a potable water supply follow all local codes for backflow prevention.
- WARNING: Contamination of your potable water supply can occur without proper backflow prevention.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- Never use chemicals that could be dangerous if accidentally mixed.

Installation for Devices Plumbed to a Faucet with a Vacuum Breaker

- This equipment features an integrated hose connection vacuum breaker.
- In cases where an installation involves a water source coming from a faucet with an integrated vacuum breaker device conforming to ASSE 1001 or ASSE 1011, a pressure bleed device conforming to IAPMO PS-104 shall be used to protect the vacuum breaker device.
- The purpose is so that continuous pressure does not adversely affect the vacuum breaker device upstream of the
 pressure bleed device. This also protects against a cross-connection between hot and cold water migration by
 encouraging the user to turn off the water supply at the faucet.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

- 1. Attach discharge tubes (see diagram). Discharge tubes can be cut to length as needed.
- NOTE: Do not install a shutoff or flow restriction device on end of discharge hose (valve, trigger, nozzle, etc.) This unit is designed for open flow dispensing.
- Mount to suitable surface <u>above the chemical</u> to prevent siphoning. Use suitable fasteners based on the mounting surface and system weight. See diagram for mounting hole size and spacing.
- 3. Select and install metering tips and suction tubes by following instructions below TO SET DILUTION RATIO.
- 4. To prevent blocking the small orifices inside the injector, flush debris from new plumbing before connecting. If water piping is older and has known contaminants, install a water filter. Always use the included washer with screen on the unit inlet.
- 5. Connect water supply.
- 6. Immerse chemical suction tubes with strainers into container(s) of chemical concentrate.

TO SET DILUTION RATIO, thread a color-coded metering tip into each tip holder. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on <u>water thin</u> chemicals with a viscosity of 1CPS. <u>Thicker</u> chemicals will require a larger tip than the ratios shown in the chart.
- Chart shows ratios at 40 PSI water pressure. Actual water pressure is shown on unit gauge during operation.
 Adjust metering tip selection based on actual water pressure using the online <u>Metering Tip Calculator</u> or the math formula shown in the chart.
- Select and thread the tip color that is closest to your desired chemical strength into the tip holder. DO NOT OVER-TIGHTEN
- Application results will ultimately determine final tip color selection.
- Push the chemical tubes over the tip holders and place the strainer in the chemical concentrate.
- If necessary, cut suction tube(s) to length.

If a leaner solution than the maximum shown in the chart is required, it will be necessary to use one proportioner to predilute the concentrate, and a second to dilute the resulting solution to the required final ratio. If this <u>Double Dilution</u> procedure is required, choose two metering tips whose ratios, when multiplied together, result in a ratio that is as close as possible to the required final ratio. *Example: For two "Bottle Fill" Mixing Station valves with 40 PSI water pressure, use a White Tip (37:1) and a Corn Yellow Tip (21:1) to achieve a final solution ratio of 777:1.*

TO OPERATE

- Hold the discharge tube inside the container to be filled, do not release it, and completely open the inlet ball valve. For units with multiple valves, only open one ball valve at a time.
- When container is filled to the desired level, close the ball valve and keep the discharge tube in the container until it completely drains before removing it.
- 3. Make final metering tip adjustments based on application results. Try the next larger or smaller sized metering tip until the results are acceptable.

METERING TIP SELECTION

METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 40 PSI			
COLOR		HIGH FLOW	LOW FLOW	BOTTLE FILL	
Brown	0.56	1031:1	480:1	142:1	
Clear	0.88	656:1	305:1	90:1	
Bright Purple	1.38	418:1	195:1	58:1	
White	2.15	269:1	125:1	37:1	
Pink	2.93	197:1	92:1	27:1	
Corn Yellow	3.84	150:1	70:1	21:1	
Dark Green	4.88	118:1	55:1	16:1	
Orange	5.77	100:1	47:1	14:1	
Gray	6.01	96:1	45:1	13:1	
Light Green	7.01	82:1	38:1	11:1	
Med. Green	8.06	72:1	33:1	10:1	
Clear Pink	9.43	61:1	29:1	8:1	
Yellow Green	11.50	50:1	23:1	7:1	
Burgundy	11.93	48:1	23:1	7:1	
Pale Pink	13.87	42:1	19:1	6:1	
Light Blue	15.14	38:1	18:1	5:1	
Dark Purple	17.88	32:1	15:1	4:1	
Navy Blue	25.36	23:1	11:1	3:1	
Clear Aqua	28.60	20:1	9:1	3:1	
Black	50.00	12:1	5:1	—	
No Tip Ratio Up To:		4.8:1	3.5:1	1.7:1	


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
 Match calculated ounces per minute (oz/min) to
- nearest oz/min in Metering Tip Selection chart.

UNIT FLOW RATES					
PSI	GPM				
P51	HIGH FLOW	LOW FLOW	BOTTLE FILL		
35	4.22	1.96	0.58		
40	4.51	2.10	0.62		
50	5.04	2.35	0.69		
60	5.52	2.57	0.76		
70	5.97	2.78	0.82		
80	6.38	2.97	0.88		
90	6.77	3.15	0.93		
100	7.13	3.32	0.98		
110	7.48	3.48	1.03		
120	7.81	3.64	1.07		
125	7.97	3.71	1.10		

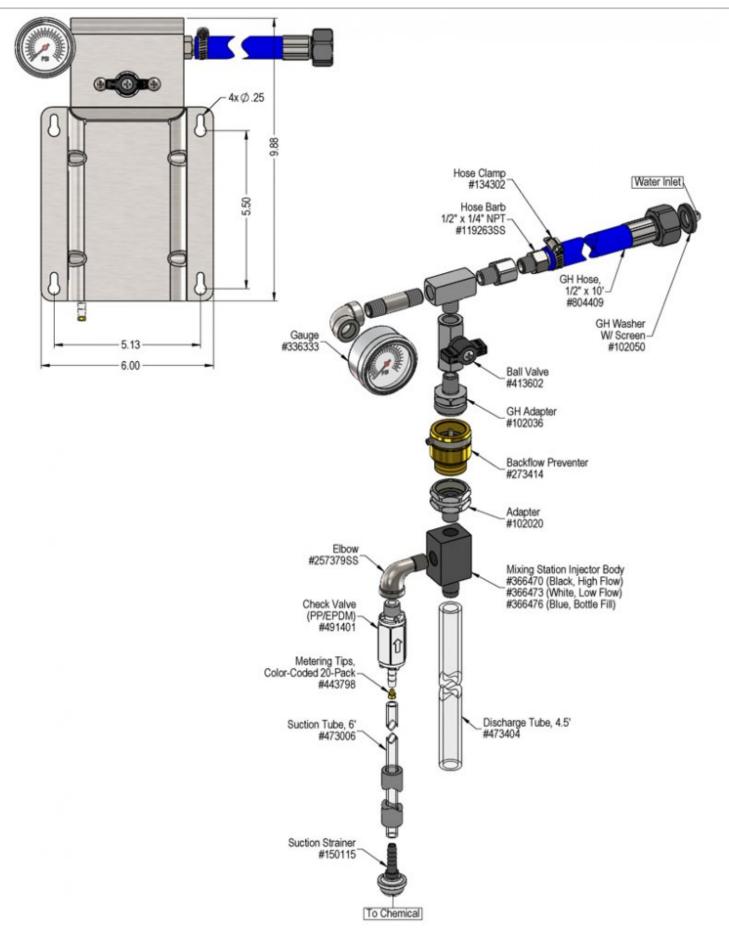

Troubleshooting Guide					
Problem			sible Cause / Solution		
 A) Unit will not draw chemical. B) Dilution too weak. C) Dilution too strong D) Water backing up into chemical container. E) Vacuum breaker constantly dripping / leaking. 		<u>Startup</u> 1, 2, 3 4 5	Maintenance 6, 7, 8, 9, 10, 11 11 8 12, 13		
Possible Cau Startup	use / Solution		ntenance		
 Water pressure too low or water temperature too high See requirements. Ball valve not completely open Completely open the ball valve. Chemical tube not immersed in chemical or chemical depleted Immerse tube or replenish. Metering tip too small Install larger metering tip. No metering tip installed or metering tip too large Install smaller metering tip. 	 7. Chen 8. Chec 9. Vacu 10. Chen meter (suck 11. Wate body 12. Vacu 13. Vacu 	 r inlet strainer scree Disconnect water nical strainer or me Clean or replace of k valve stuck or fai Clean or replace. um leak in chemica Tighten the conne nical tube stretched ring tip holder or picting air in) Cut off end of tube r scale or chemical causing poor or no Follow Preventive using hot water ar draw at all, careful body in descaling um breaker fouled Replace vacuum te Install filter on wat um breaker experied The vacuum breal experiencing back normal operating of Do not exceed marequirements. Do not modify disc 	een clogged and clean the screen. tering tip partially blocked chemical strainer and/or metering tip. led al pick-up connections ction. d out where tube slides over in hole/cut in chemical tube e or replace tube. I build-up may have formed in the o chemical pick-up Maintenance instructions below, nd/or descaling acid. When there is no lly remove fittings and soak entire acid. or failed oreaker. ter supply line. encing backpressure ker(s) will vent water when spressure that cannot exist under		

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

