

# Lafferty Equipment Manufacturing, Inc. Installation & Operation Instructions

## Model # 917918 · Rinse / A-20SS Airless Foam Hose Drop Station

### REQUIREMENTS

#### Chemical Concentrate

#### Water

Temperature	up to 160°F
Pressure	400 to 1000 PSI
Flow	5.0 GPM @ 700 PSI
Supply Line	3/8"

#### Hose

Foam	3/8" ID x 50'
Rinse	3/8" ID x 50'

#### Nozzle

Foam	A-20 Airless Foam Wand
Rinse	0512

### OPTIONS

#### Stainless Steel Hose Racks

Large Stainless Steel Hose Rack	# 224150
---------------------------------	----------

#### Stainless Steel Jug Racks

Jug Rack, SS, 1 Gallon, Round/Square	# 224200
Jug Rack, SS, 2 1/2 Gallon	# 224210
Jug Rack, SS, 5 Gallon, Round/Square	# 224215

#### Safe Flow Lid™ for 1 Gallon Jugs

Lid, Suction Tube, and Strainer	# 709101
---------------------------------	----------

#### Alternate Check Valve - EPDM Standard

Check Valve, Chemical, SS, Viton, 1/4"	# 491324-V
--	------------

### WEIGHT & DIMENSIONS

#### Single Package

Shipping Weight	44 lbs.
Shipping Dimensions	28" x 28" x 8"



**Lafferty**  
EQUIPMENT MANUFACTURING INC.

[www.laffertyequipment.com](http://www.laffertyequipment.com)

501-851-2820

**WARNING! READ ALL  
INSTRUCTIONS BEFORE  
USING EQUIPMENT!**



### OVERVIEW

The Rinse / A-20SS Airless Foam Hose Drop Station is a combination applicator foam/rinse for projecting foaming chemicals at 3.11 GPM @ 700 PSI, without compressed air, and for rinsing. This stainless steel venturi injection system uses high water pressure (400 - 1000 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. The solution then flows through the foam hose and trigger gun to the "airless" foam wand which draws in atmospheric air to create and project wet, clinging foam on to any surface up close or at distances up to 12'. Rinse at full pressure through a separate hose, trigger gun and fan nozzle.

**SAFETY & OPERATIONAL PRECAUTIONS**

- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.

**TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)**

1. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
2. Connect the discharge hoses as shown in the diagram and close the inlet ball valves.
3. To prevent premature blocking of the "Y" strainer flush any new plumbing of debris prior to hooking up to the station..
4. Connect water supply

**Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.**

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. **DO NOT OVER-TIGHTEN.**
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

**TO FOAM**

1. Make final metering tip adjustments based on application results.
2. Open the inlet ball valve then pull the trigger to begin application.
3. When application is completed, release the trigger, return to the unit and close the inlet ball valve.
4. Squeeze the trigger to relieve pressure in hose. Rinse the work surface before solution dries.

**TO RINSE**

1. With trigger gun in hand open the inlet ball valve.
2. Pull the trigger and begin rinsing.
3. When rinsing is completed, release the trigger then close the inlet ball valve.
4. Briefly squeeze the trigger to relieve pressure in hose.

**METERING TIP SELECTION**

METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 700 PSI	
		FOAM	RINSE
Brown	0.56	711:1	—
Clear	0.88	452:1	—
Bright Purple	1.38	288:1	—
White	2.15	185:1	—
Pink	2.93	136:1	—
Corn Yellow	3.84	104:1	—
Dark Green	4.88	82:1	—
Orange	5.77	69:1	—
Gray	6.01	66:1	—
Light Green	7.01	57:1	—
Med. Green	8.06	49:1	—
Clear Pink	9.43	42:1	—
Yellow Green	11.50	35:1	—
Burgundy	11.93	33:1	—
Pale Pink	13.87	29:1	—
Light Blue	15.14	26:1	—
Dark Purple	17.88	22:1	—
Navy Blue	25.36	16:1	—
Clear Aqua	28.60	14:1	—
Black	50.00	8:1	—
No Tip Ratio Up To:		7:1	—

The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.


**FORMULA**

**GPM × 128 ÷ Desired Dilution Ratio = oz/min**

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

**UNIT FLOW RATES**

PSI	GPM	
	FOAM	RINSE
400	2.35	3.80
500	2.63	4.25
600	2.88	4.65
700	3.11	5.03
800	3.32	5.37
900	3.53	5.70
1000	3.72	6.01

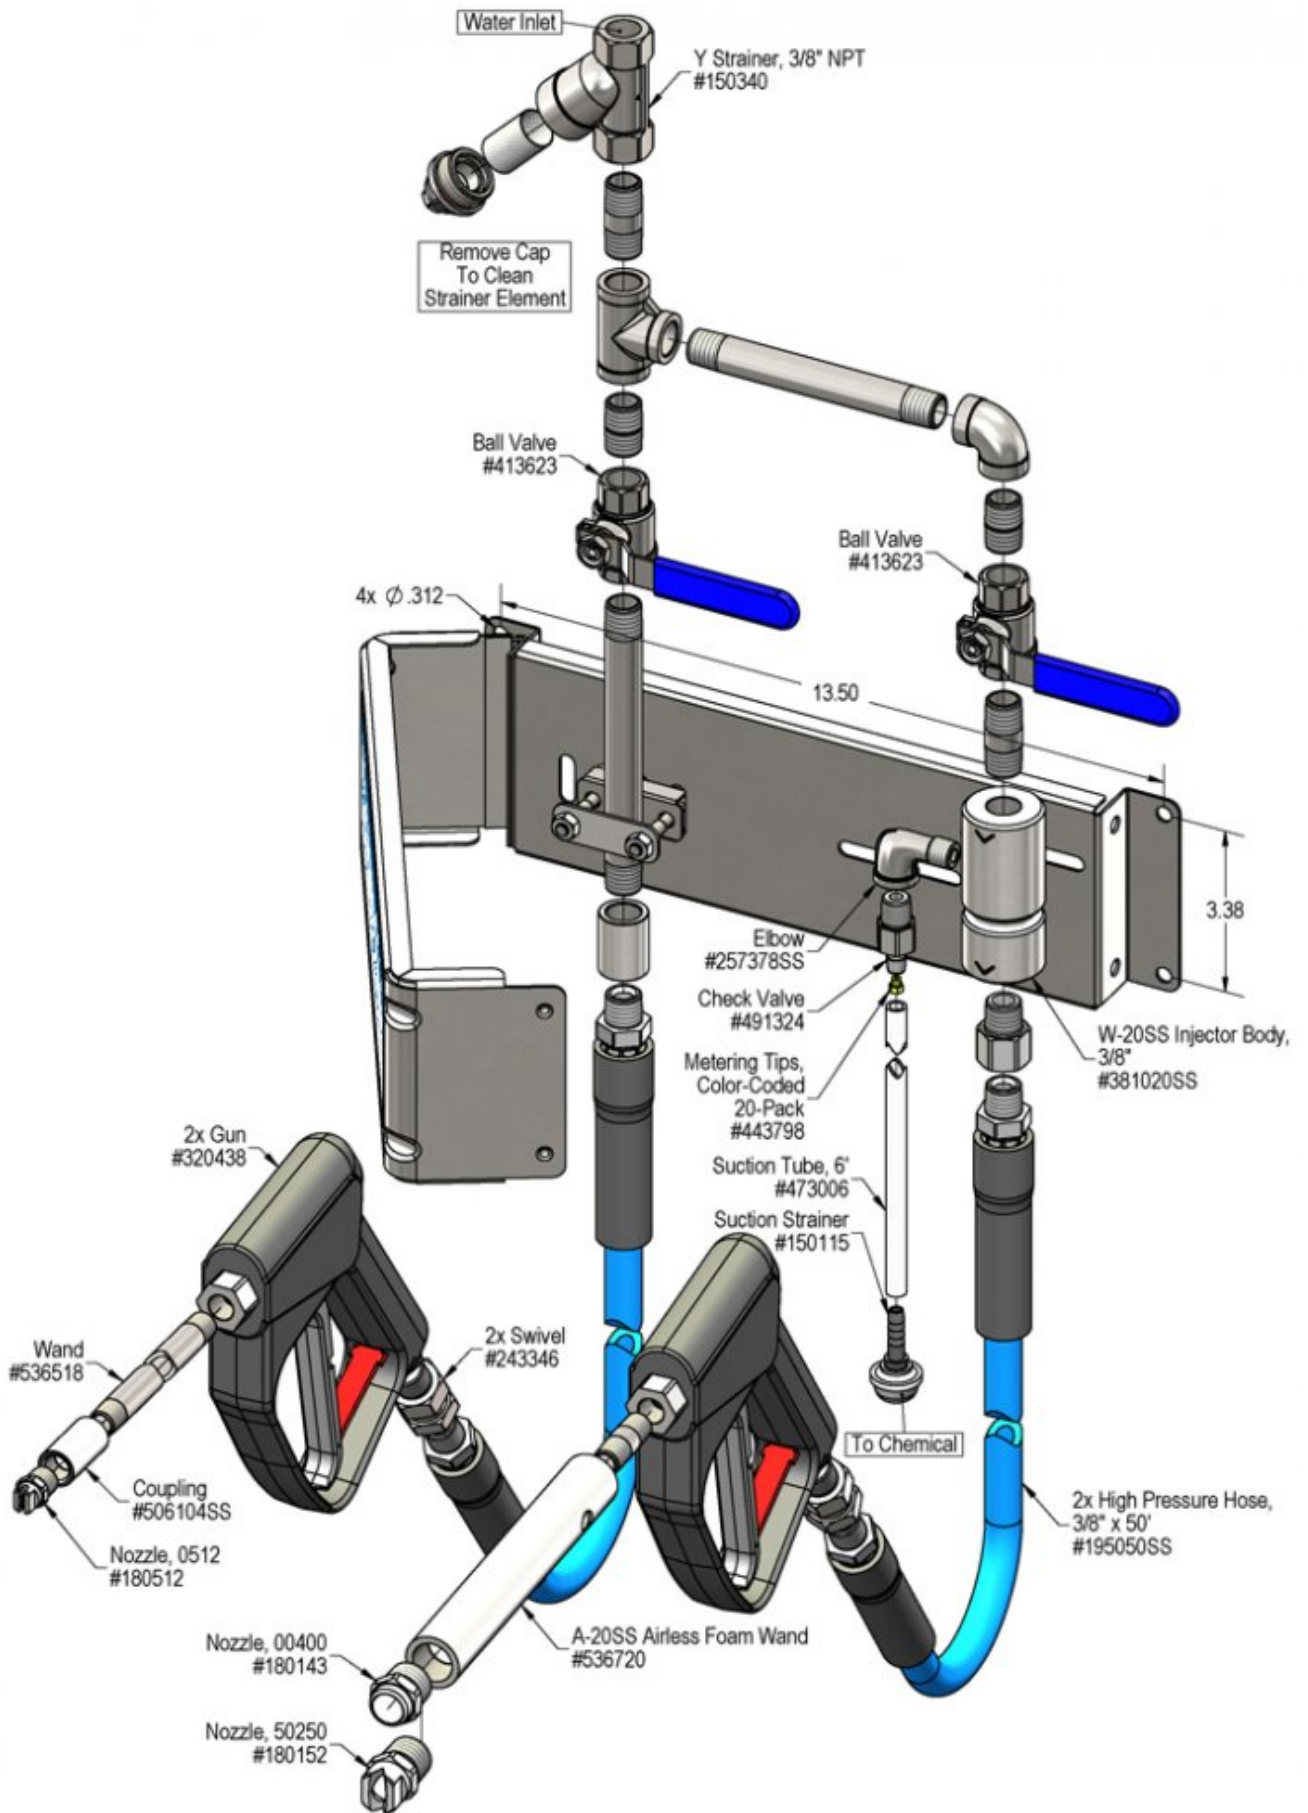

## Troubleshooting Guide

Problem	Possible Cause / Solution	
	Startup	Maintenance
A) Unit will not draw chemical	1, 5, 6, 7	10, 11, 12, 13, 14
B) Foam does not clean or foam properly	2, 4, 5, 7, 8	10, 11, 12, 13, 14
C) Using too much chemical	3	
D) Water backing up into chemical container		9

Possible Cause / Solution	
Startup	Maintenance
<ol style="list-style-type: none"> <li><b>1. Inlet ball valve not completely open</b> <ul style="list-style-type: none"> <li>◦ Completely open the ball valve.</li> </ul> </li> <li><b>2. Not enough chemical - metering tip too small</b> <ul style="list-style-type: none"> <li>◦ Install larger metering tip.</li> </ul> </li> <li><b>3. No metering tip installed or metering tip too large</b> <ul style="list-style-type: none"> <li>◦ Install smaller metering tip.</li> </ul> </li> <li><b>4. Improper chemical</b> <ul style="list-style-type: none"> <li>◦ Ensure product is recommended for foaming and the application.</li> </ul> </li> <li><b>5. Chemical tube not immersed in chemical or chemical depleted</b> <ul style="list-style-type: none"> <li>◦ Immerse tube or replenish.</li> </ul> </li> <li><b>6. Discharge hose too long or wrong size (SEE REQUIREMENTS)</b> <ul style="list-style-type: none"> <li>◦ Replace hose with correct size/length.</li> </ul> </li> <li><b>7. Water pressure or water volume too low/inlet piping too small causing poor chemical pick up</b> <ul style="list-style-type: none"> <li>◦ Increase water pressure or water volume (SEE REQUIREMENTS).</li> </ul> </li> <li><b>8. Soil has hardened on surface; always rinse before it dries</b> <ul style="list-style-type: none"> <li>◦ Reapplication may be necessary.</li> </ul> </li> </ol>	<ol style="list-style-type: none"> <li><b>9. Chemical check valve stuck or failed</b> <ul style="list-style-type: none"> <li>◦ Clean/disassemble and turn seat over or order rebuild kit.</li> </ul> </li> <li><b>10. Chemical strainer or metering tip partially blocked</b> <ul style="list-style-type: none"> <li>◦ Clean or replace chemical strainer and/or metering tip.</li> </ul> </li> <li><b>11. Chemical tube stretched out or pin hole/cut in chemical tube (sucking air in)</b> <ul style="list-style-type: none"> <li>◦ Cut off end of tube or replace tube.</li> </ul> </li> <li><b>12. Vacuum leak in chemical pick-up connections</b> <ul style="list-style-type: none"> <li>◦ Tighten the connection.</li> </ul> </li> <li><b>13. Water strainer clogged or missing/injector inlet orifice clogged</b> <ul style="list-style-type: none"> <li>◦ Clean or replace strainer; check/clean inlet orifice for obstructions. DO NOT DRILL OUT.</li> </ul> </li> <li><b>14. Hard water scale or chemical build-up may have formed in the injector body or foam wand causing poor or no chemical pick-up</b> <ul style="list-style-type: none"> <li>◦ Follow Preventive Maintenance instructions below, using hot water and/or de-scaling acid. When there is no draw at all, carefully remove fittings and soak entire injector body and/or foam wand in de-scaling acid.</li> </ul> </li> </ol>

**PREVENTIVE MAINTENANCE:** When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

