

Lafferty Equipment Manufacturing, Inc. Installation & Operation Instructions

Model # 709101 · Safe Flow™ Lid for 1 Gallon Jugs

AVAILABLE STYLES

Fits most 1 gallon jugs (~38mm thread OD) #709101

Fits Rieke Flexspout (~40mm thread OD) #709101-R

Fits 1-3/4" Delta Caps (~44mm thread OD) #709101-M



Lafferty
EQUIPMENT MANUFACTURING INC.

www.laffertyequipment.com

501-851-2820

**WARNING! READ ALL
INSTRUCTIONS BEFORE
USING EQUIPMENT!**




OVERVIEW

Safe Flow Lids™ provide safe and convenient dispensing of chemicals from 1 gallon containers. The threaded lid keeps out contaminants, reduces odors and prevents chemical splashing and spillage. These unique, heavy-duty, machined polypropylene lids attach to chemical suction tubes with a 1/4" hose barb and can be quickly unscrewed and attached to another container or easily removed and stored. Includes a strainer and suction assembly to place inside the chemical container. Available with various lid threads.

SAFETY & OPERATIONAL PRECAUTIONS

This page intentionally left blank.

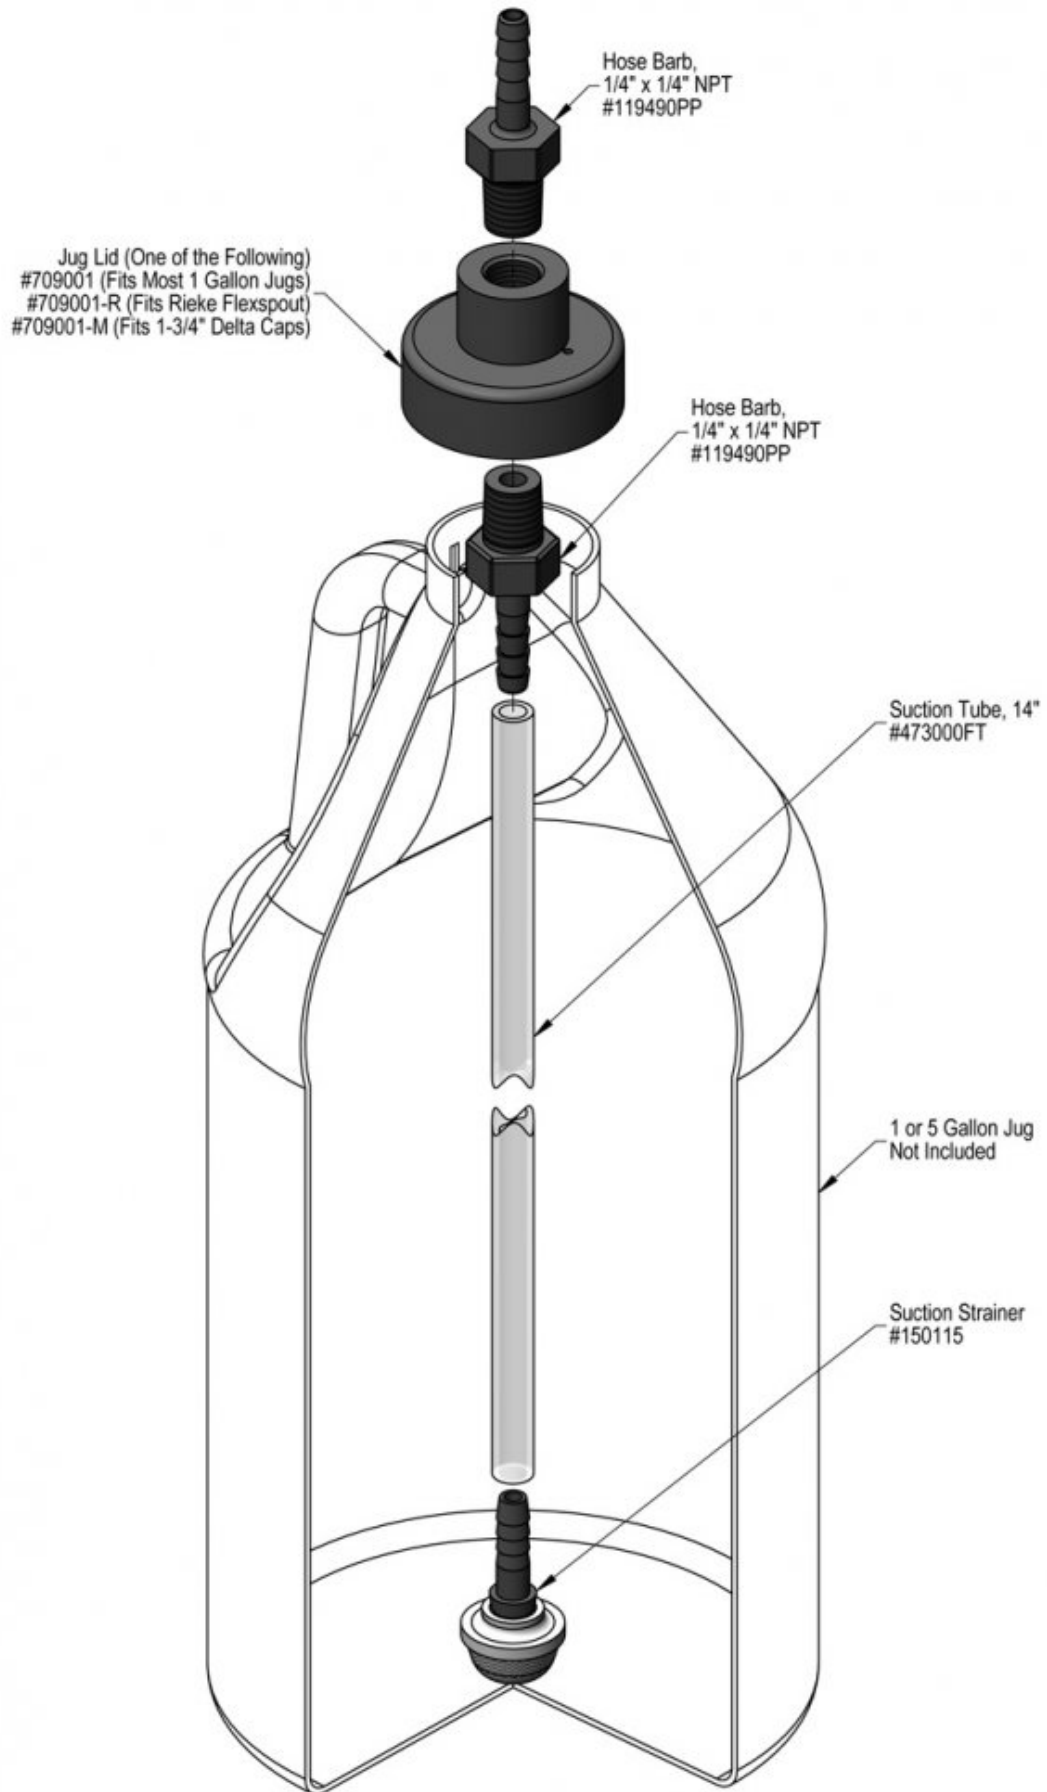

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

